

1) Compatible with : THE NEXT SPARK(M400) 2015

2) How to set DIP S/W : [(ON)-Down 0 : ↓ off on / (OFF)-Up 1 : ↑ off on]

<p>DIP_SW1 : Navigation On/Off</p>	<p>DIP_SW2 : X</p>
<p>DIP_SW3 : Off 4 wire touch On UART touch</p>	<p>DIP_SW4 : Rear camera On/Off</p>
<p>DIP_SW5 : X</p>	<p>DIP_SW6 : On</p>

0,1,1,0,1,0 : THE NEXT SPARK(2015)

2-1) How to switch the screen :

1. Press the button twice for short.
2. Screen will be switched when press for 2 seconds long.



2-2) Please select the AV on menu when using AV.


2-3) NAV DMB Channel UP 3 5 / DOWN 4 6

It is possible when NAV IR / Interface connect with main IR.


3) How to use PIP : when press for 5 seconds long [PIP1 → PIP2 → PIP OFF] It will switch sequentially

<p>① PIP 1</p> <p>Small window screen will appear for 3 seconds when using original button on NAV screen.</p>	<p>② PIP 2</p> <p>Full original screen will appear for 3 seconds and then disappear when using original button on NAV screen.</p>	<p>③ PIP OFF</p> <p>PIP function can't start-up</p>
---	---	---


[Components]

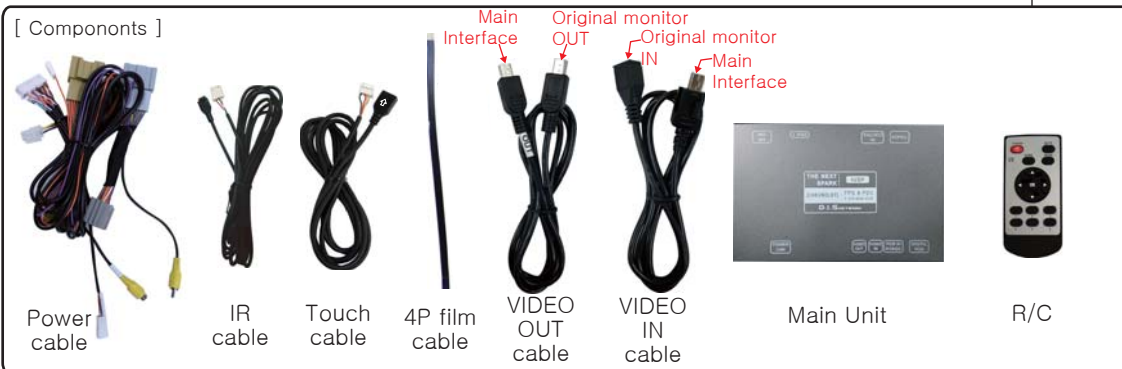


4) How to connect monitor's video :

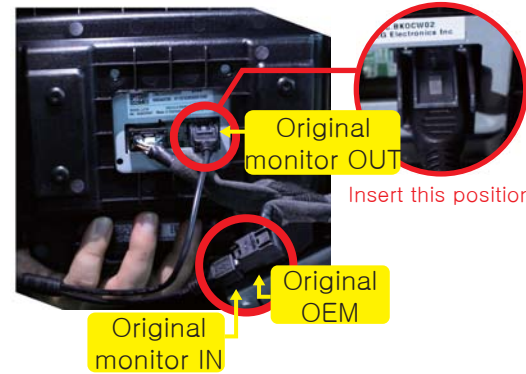


5) How to connect Deque IN/OUT :

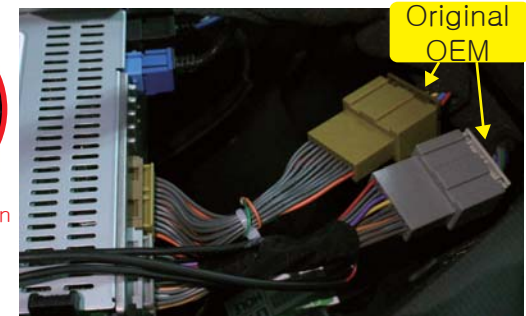

6) How to connect when using FPG & PDC :

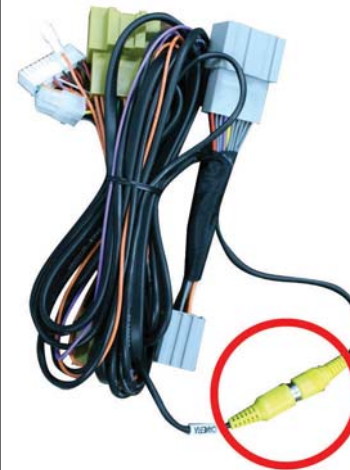

7) How to R/C and FPG&PDC :

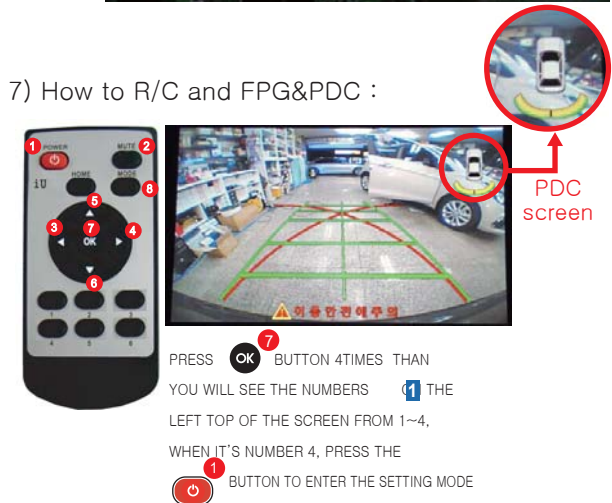

PRESS **OK** BUTTON 4 TIMES THAN YOU WILL SEE THE NUMBERS 1 THE LEFT TOP OF THE SCREEN FROM 1~4, WHEN IT'S NUMBER 4, PRESS THE **POWER** BUTTON TO ENTER THE SETTING MODE

